


JT

Acme Screw Jack

Descriptions	001
Materials	001 - 002
Selection Guide	003 - 013
Selection Notes	003
Unit Converter	004
Calculation Formulas	005
Sample Part Number	010
Permissible Buckling Load	014
Specifications	015
Overall Dimensions	016 - 021
JT-0.5T ~ JT-1T	016
JT-2T ~ JT-3T	017
JT-5T ~ JT-10T	018
JT-15T ~ JT-20T	019
JT-30T ~ JT-40T	020
JT-50T ~ JT-100T	021
Other Products	023 - 026
Contact Us	027

Contents

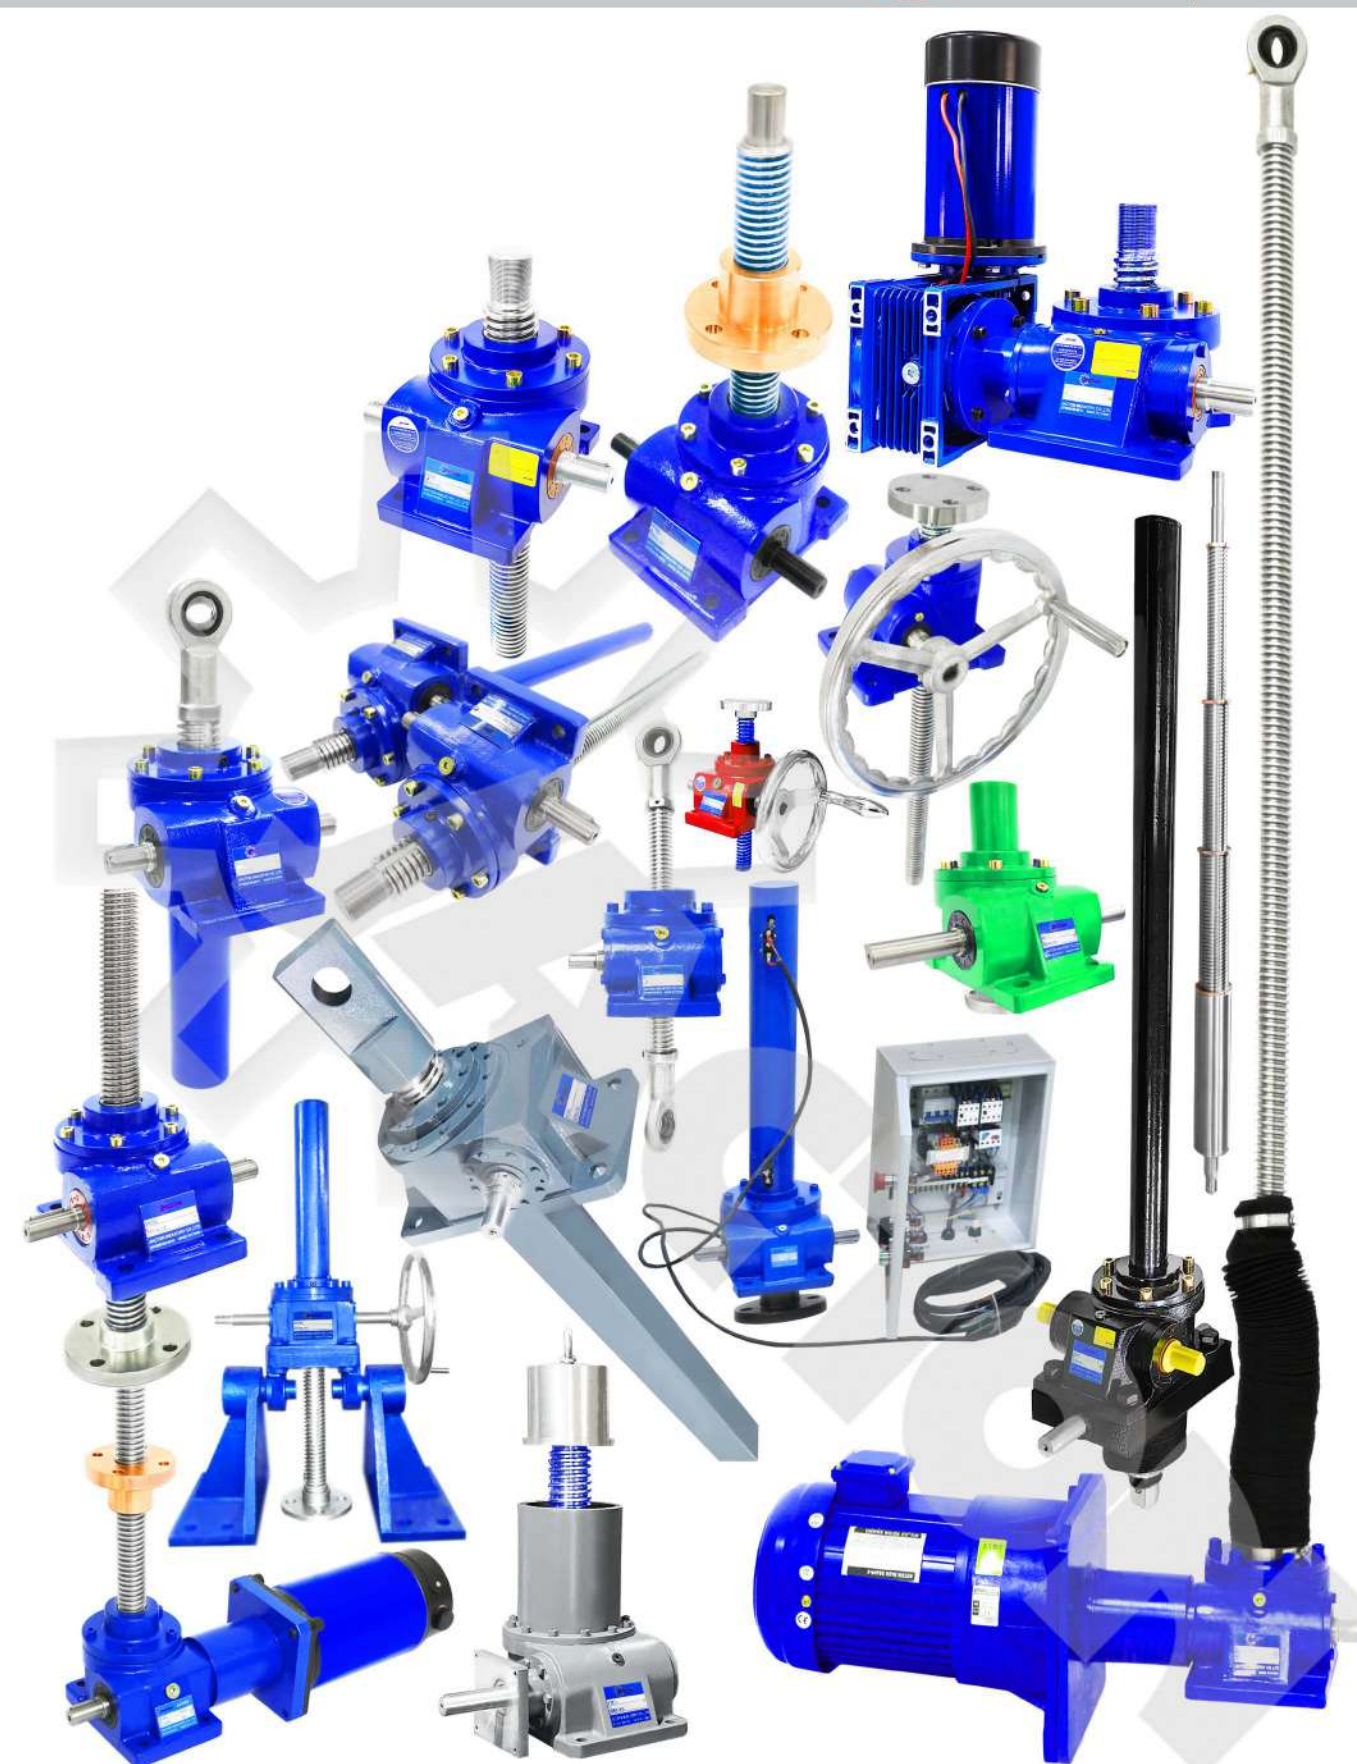



Descriptions

JT Series Classic Machine Screw Jacks: Strong Acme threads make these screw jacks better than ball screw jacks for heavy loads, intermittent positioning applications. They offer a low-cost solution to a wide variety of industrial lifting, lowering, pushing, pulling and rolling linear motions. Due to the classic design, you don't need to attach any construction elements to the housing. In the absence of vibration load, they have self-locking and precisely position loads, will hold loads without backdriving, and no need any brake mechanism or locking system. Under normal operation, maintenance free.

Key Features

- 12 sizes in two gear ratios (high ratio, slow ratio) for high and slow linear speeds (up to 3m/min).
- Static load capacities from 0.5 ton to 100 tons as Standard.
- Self locking trapezoidal screw offers maximum stroke of 7.5m, precise positioning, and uniform speed.
- Basic designs: Translating screw, Keyed screw, and Rotating screw.
- Upright or Inverted mounting. Available in tension or compression loads.
- Standard with 1-start thread screw, custom 2-starts threads screw which offers increased travel speed and require a brake or external locking device to hold position.
- Power source: manual operation with hand wheel, electrically by motor driven.
- Can be applied either individually use or combined into a exactly synchronized lifting system(multiple jack systems), linked by connecting shafts, bevel gearboxes, couplings, electric motors, gear reducers, limit switches and pillow blocks etc.
- Custom double clevis screw jack, trunnion mount screw jack, and anti-backlash screw jack.
- Can be used as alternatives to hydraulic and pneumatic systems.

Materials

We use the best materials to guarantee the performance and lifetime of the screw jacks you purchased.

Housing

- High-strength Casting Housing, Ductile Iron.

Lifting Screw

- C45 Steel as Standard. Custom Stainless Steel 304 or 316.

Input Shaft (Worm)

- C45 Steel in high frequency heat treatment process. Custom Stainless Steel 304 or 316.

Worm Gear / Travelling Nut / Safety Nut

- High Strength Bronze ZQA19-4 (Casting aluminum bronze) as Standard, Custom High Strength Bronze ZCuSn10Pb1(Casting tin bronze)

Bearing

- Anti-friction Ball Thrust Bearings for Worm Gear. Anti-friction Ball Bearings for Input Shaft(worm). Custom Stainless Steel 304.

Motor Flange Adapter

- High-strength Casting Motor Adapter, Ductile Iron. Custom Stainless Steel 304 or 316.

Lubricants

- Synthetic Grease, Extreme Pressure EP2 Lithium Grease.

Materials





Selection Guide

Selection Notes

- (01) Screw Jacks and Lifting Systems are for industrial use only, not recommended for transporting personnel.
- (02) Carefully consider jack ratings before making a selection. Be sure that the dynamic or static load carried or sustained by jack does not exceed its maximum capacity.
- (03) Carefully consider the combination of screw shaft speed (rpm) and rated load. Also, take extra care in verifying rated buckling load and screw shaft speed (rpm). Exceeding the data provided in this catalog can cause major damage to the system.
- (04) Make sure that the surface temperature of the housing does not exceed temperature of -15°C to +80°C during operation. If using a traveling nut jack, measure the traveling nut surface temperature. Make sure all the rotating parts are completely stopped before proceeding to measure.
- (05) The maximum input speed is 1500 rpm as long as the input power dose not exceed the jack's maximum allowable input power.
- (06) Screw jack can not be operated continuously. Duty cycle based on 30 minutes.
 - **Note:** Below duty cycles are based on ambient temperatures 20°C. For ambient temperatures higher than 20°C, the duty cycle (ED) must be reduced.
 - * Screw Jack with Trapezoidal Screw (Machine Screw Jack) duty cycle $\leq 20\%ED$.
 - * Screw Jack with Ball Screw (Ball Screw Jack) duty cycle $\leq 30\%ED$.
 - **Note:** For operation longer than that mentioned above or for any continuous operation, the jacks temperature must be monitored and should not exceed 80°C maximum in order to determine its duty cycle.

Duty Cycle (%ED) = [1 Duty Cycle / (1 Duty Cycle + 1 Rest Cycle)] x 100%
- (07) Be sure not to exceed the maximum input torque for multiple screw jack systems by verifying the rated input torque for each jack.
- (08) Be sure that starting torque is 200% or more of required running torque.
- (09) Be sure that ample driving power is available to drive the jack when using in temperatures below 0°C. Low temperatures decrease the jack's efficiency due to the increased grease viscosity inside the jack's gearbox.

Selection Guide

- (10) Although Screw Jack with **Single-start** Trapezoidal Screw (Machine Screw Jack) has self-locking feature, vibration and shock may affect its efficiency, in which case a brake motor or extra braking device is required. Screw Jack with **Double-start** Trapezoidal Screw (Machine Screw Jack) is considered not self-locking will require a brake or other holding device. Screw Jack with Ball Screw (Ball Screw Jack) can backdrive because of their extremely high efficiencies and require some means of holding the load, such as a brake motor.
- (11) When jacks are working, can not force to stop, may result in the jacks damage or injury personnel.
- (12) When Ball Screw Jacks are under loads, can not change the motor drive to manual operation. Because the loads will cause the input shaft to rotate very dangerously.
- (13) Mechanical stops (Stop Nuts) are not provided on the lifting screw unless requested. Therefore, it is possible to drive the screw out of the jack's housing.
- (14) Never approach or touch the rotary parts (input shaft, etc.) or the lifting screw during operation.
- (15) Bellows Boots and Protective Tubes should be used to protect and keep the lifting screw clean in dusty or abrasive environments.

Unit Converter

- 1 ft = 304.8 mm
- 1 in = 25.4 mm
- 1 m = 10 dm = 100 cm = 1000 mm
- 1 in-lb = 0.113 Nm
- 1 Nm = 0.737 ft-lb
- 1 ft-lb = 1.356 Nm
- 1 lb = 0.454 kg
- 1 kg = 2.205 lb = 1000 g
- 1 N = 0.1 kg
- 1 t = 1000 kg = 10 kN = 2000 lb
- 1 m/min = 1000 mm/min = 16.7 mm/sec
- 1 in/sec = 25.4 mm/sec
- 1 ft/sec = 304.8 mm/sec
- 1 hp = 0.75 kW
- °C = (°F-32) / 1.8
- °F = °C x 1.8 + 32



Selection Guide

Calculation Formulas

■ **(01) Calculate Total Load Ws (N)**

$$W_s = W \times sf$$

Ws = Total Load (N)

W = Maximum Load (N)

sf = Safety Factor (Table 1.)

Table 1. Safety Factor sf

Load Conditions	Example Purposes	Safety Factor (sf)
Smooth movement with no shock, Light load	Opening and closing a valve, Adjusting a conveyor	1.0 ~ 1.3
Light shock, Medium load	Use with various kinds of transporting equipment and lifters	1.3 ~ 1.5
Severe shock and/or vibration, Heavy load	Use with large transporting carriages, Holding the position of a press roller	1.5 ~ 3.0

• **Note:** The above table is for general reference only. Consider particular operating conditions under which you operate before selecting a safety factor.

■ **(02) Calculate Load Per Jack Wn (N)**

$$W_n = W_s / (N_o \times fd \times \eta_g)$$

• **Note:** For a synchronous drive, use a synchronous drive coefficient (Table 2).

• **Note:** Don't ignore spiral bevel gearbox efficiency 94%.

Wn = Load Per Jack (N)

Ws = Total Load (N)

No = Number of jacks

fd = Multiple jacks system coefficient (Table 2.)

ηg = Bevel Gearbox efficiency = 94%

Table 2. Multiple Jacks System Coefficient fd

No. of jacks	1	2	3	4	5 ~ 8
Coefficient	1	0.95	0.9	0.85	0.8

■ **(03) Jack Selection**

Follow these steps to make a preliminary jack selection.

Points of preliminary jack selection

- Select (temporary) worm speed ratio by adjusting the screw shaft rpm. If difficult to select, inspect by H speed.
- Consider traveling space when selecting stroke.
- Select options based on your needs.

Selection Guide

■ **(04) Verifying Allowable Buckling Load Pcr (N)**

For a compressive load, verify that it does not exceed the allowable buckling load. If it does, increase jack size and recalculate.

$$P_{CR} = f_m \times (d^2 / L)^2, \text{ Make Sure } P_{CR} > W_n \times sf \text{ (sf = 4 as usual)}$$

Pcr = Allowable buckling load (N)

f_m = Support coefficient (Table 4.)

L = Distance between load-supporting plane(point) and mounting plane(point) (mm)


d = Screw shaft root diameter (mm) = D - TP - 2 x ac TP = Screw pitch (mm)

W_n = Load Per Jack (N) D = Screw diameter (mm) ac = Assembly clearance (Table 3.)

Table 3. Assembly Clearance ac

Screw Pitch (mm)	ac
1.5 - 5	0.25
6 - 12	0.5
14 - 44	1

Table 4. Support Coefficient fm

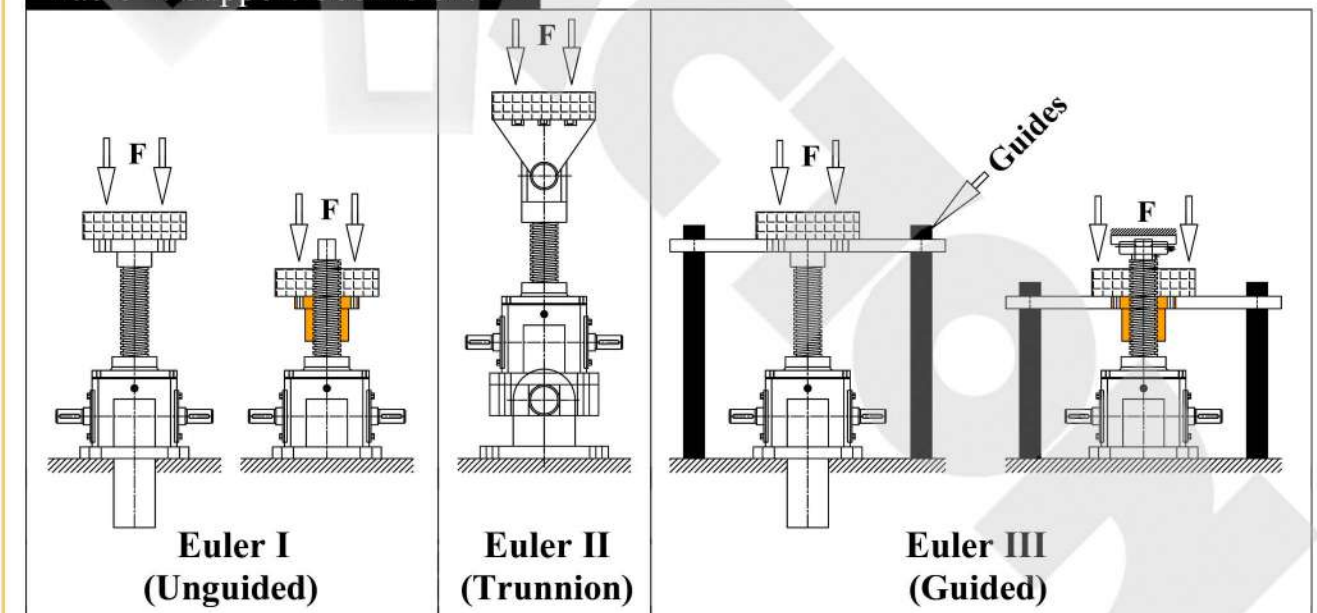

- **Euler I (fm = 2.5 x 10⁴):** Screw jack housing fixed to the base (foot-mounted). Lifting screw end (or travelling nut) lifting the free load (unguided).
- **Euler II (fm = 1 x 10⁵):** Screw jack housing and lifting screw end (or travelling nut) are trunnion mounted by pin or joint for pivot drive.
- **Euler III (fm = 2 x 10⁵):** Screw jack housing fixed to the base (foot-mounted). Lifting screw end (or travelling nut) lifting the fixed load (guided).



Selection Guide

Calculation Formulas

(05) Verifying Allowable Screw Speed Nc (rpm)

- **Note:** Only for Screw Jack with Traveling Nut (Rotating Screw Jack), verify that it does not exceed the allowable screw shaft rpm. If it does, increase jack size and recalculate.

Nc = (96 x fn x d x 10^6) / L^2, Make Sure Nc > n2, n2 = n1 / i

Nc = Allowable screw shaft speed (rpm) fn = Shaft end support coefficient (Table 5.)

L = Distance between load-supporting plane and mounting plane (mm) (Table 5.)


d = Screw shaft root diameter (mm) = D-TP-2xac TP = Screw pitch (mm)

D = Screw diameter (mm) ac = Assembly clearance (Table 3.)

n2 = Output speed of screw shaft (rpm) n1 = Input speed of worm shaft (rpm)

i = Gear ratio

Table 5. Shaft End Support Coefficient fn

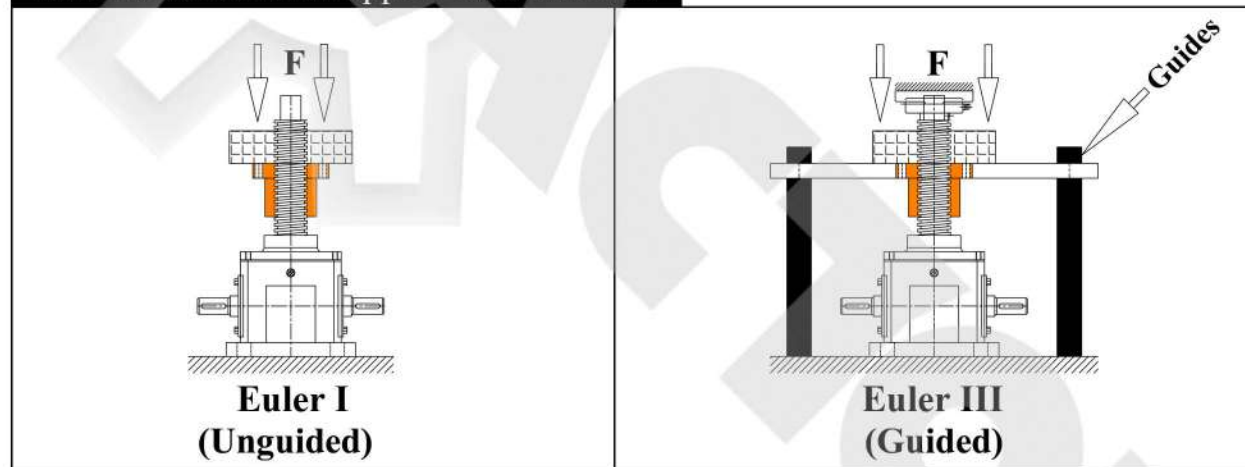

- **Euler I (fn = 0.36):** Screw jack housing fixed to the base (foot-mounted). Travelling nut lifting the free load (unguided).
- **Euler III (fn = 1.56):** Screw jack housing fixed to the base (foot-mounted). Travelling nut lifting the fixed load (guided).

(06) Confirming Required Input Speed n1 (rpm)

Determine the required input rpm, using the required screw shaft speed.

- **Note:** Input speed should not exceed 1500 rpm.

n1 = v x i / TP

v = Lifting speed (mm/min)

n1 = Input speed of worm shaft (rpm)

TP = Screw pitch (mm)

i = Gear ratio

Selection Guide

(07) Verifying Required Input Torque per T (Nm)

T = (Fdyn x TP) / (2 x pi x eta x i) + To

Fdyn = Dynamic axial force (= lifting force) (kN) Fstat = Static axial force (= retention force) (kN)

TP = Screw pitch (mm) pi = 3.1416

eta = Screw jack efficiency (see the Specifications of Jack Series)

* For Machine Screw Jacks, normal eta = 0.15 (H ratio), eta = 0.12 (L ratio)

* For Ball Screw Jacks, normal eta = 0.3~0.35 (H ratio), eta = 0.22 (L ratio)

i = Gear ratio

To = Idling torque (Nm) (see the Specifications of Jack Series)

(08) Verifying Required Input Power P (kW)

P = W1 x v1 / (6000 x eta)

P = Input power (kW) W1 = Lifting force (kgf) v1 = Lifting speed (m/min)

eta = Screw jack efficiency (see the Specifications of Jack Series)

* For Machine Screw Jacks, normal eta = 0.15 (H ratio), eta = 0.12 (L ratio)

* For Ball Screw Jacks, normal eta = 0.3~0.35 (H ratio), eta = 0.22 (L ratio)

(09) Other Calculation Formulas

09.01) Lifting Speed: v = n1 x TP / i

09.02) Stroke / Revolution: SR = TP / i

09.03) Input Torque: T = 9550 x P / n1 + To

09.04) Input Power: P = T x n1 / 9550

09.05) Starting Torque per Jack: Tst ≈ T x 1.3

09.06) Hand Wheel Turning Force: Whw = T / Rhw

09.07) Input Power of Multiple Jacks System: Ps = P x No / (fd x eta_g)

09.08) Input Torque of Multiple Jacks System: Ts = T x No / (fd x eta_g)

09.09) Screw Shaft Pitch Diameter: d2 = D - 0.5 x TP

09.10) Screw Shaft Torque: Thub = Fdyn x (d2 / 2) x tan(alpha ± phi), phi ≈ 6°

09.11) Lead Angle: alpha = arctan[TP / (d2 x pi)]

- **Note:** A prerequisite is a vibration-free operation

* Self-locking at standstill (Static): 2.4° < alpha < 4.5°, may require brake motor

* Self-locking from movement (Dynamic): alpha < 2.4°, don't require brake motor

* No self-locking: alpha > 4.5°, require brake motor



Selection Guide

Calculation Formulas

09.12) Duty cycle based on 1 hour: $ED = [S \times As \times 5 / (3 \times v)] \times 100\%$

09.13) Ball Screw Service Life in Hours: $L_h = (C_{dyn} / F_{dyn})^3 \times 10^6 / (n_2 \times 60)$, $n_2 = n_1 / i$

- **Note:** Trapezoidal Screw Service Life cannot be determined by the formula used to calculate a Ball Screw wear life. Use the information below as a reference.
50kN(5 ton) and below models average expected life 5000 meters.
100kN(10 ton) and above average expected life 1000 meters.

v = Lifting speed (mm/min)

n1 = Input speed of worm shaft (rpm)

n2 = Output speed of screw shaft (rpm)

TP = Screw pitch (mm)

i = Gear ratio

SR = Stroke / Revolution (mm)

N_o = Number of jacks

fd = Multiple jacks system coefficient (**Table 2.**)

η_g = Bevel Gearbox efficiency, η_g ≈ 94%

P = Input power per jack (kW)

P_s = Input power of multiple jacks system (kW)

T_o = Idling torque (Nm)

T = Input torque per jack (Nm)

T_s = Input torque of multiple jacks system (Nm)

T_{st} = Starting torque per jack (Nm)

T_{hub} = Screw Shaft Torque (Nm)

L_h = Ball screw service life in hours (h)

C_{dyn} = Dynamic load capacity of ball screw (kN)

F_{dyn} = Dynamic axial force (= lifting force) (kN)

α = Lead Angle (°)

φ = Dynamic friction angle (°)

d₂ = Pitch diameter (mm)

D = Screw shaft diameter (mm)

W_{hw} = Hand wheel turning force (N)

R_{hw} = Hand wheel radius (m)

π = 3.1416

ED = Duty Cycle (%/hr)

S = Length of Stroke (mm)

As = Number of load cycles (up and down movement).

* **Example:** 5 times in and out movement of the screw shaft equals 10 double strokes.

Selection Guide

Sample Part Number (Example) :

JT-5T - US - 300 - H - I - C - PP
(1) (2) (3) (4) (5) (6) (7)

(1) Models & (4) Gear Ratios

JT-0.5T (Tr20x5) H=1:5 M=1:10 L=1:20	JT-1T (Tr24x5) H=1:5 M=1:10 L=1:20	JT-2T (Tr26x5) H=1:5 M=1:10 L=1:20	JT-3T (Tr32x6) H=1:6 M=1:12 L=1:24	JT-5T (Tr38x6) H=1:6 M=1:12 L=1:24	JT-10T (Tr46x8) H=1:8 M=1:16 L=1:32	JT-15T (Tr52x8) H=1:8 M=1:16 L=1:32
JT-20T (Tr65x10) H=1:10 M=1:20 L=1:40	JT-30T (Tr75x12) H=1:12 M=1:18 L=1:36	JT-40T (Tr80x12) H=1:12 M=1:18 L=1:36	JT-50T (Tr90x14) H=1:7 M=1:14 L=1:28	JT-100T (Tr100x16) H=1:8 M=1:16 L=1:32	H: High ratio M: Medium ratio L: Slow ratio	

1.1) Model Note 1: the model indicates the maximum static load of this screw jack, but not the Maximum dynamic load. The dynamic load depends on the lifting speed, travel length and others working conditions.


1.2) Model Note 2: The slower the lifting speed, the greater the dynamic load.

1.3) Model Note 3: In the case of compressed loads and long strokes, please calculate maximum critical buckling force.

1.4) Gear Ratio Note 1: Screw jacks with gear ratios between 20:1 and 56:1, are self-locking and, in the absence of vibration, will hold loads without backdriving. All other ratios may require a brake to prevent backdriving.

1.5) Gear Ratio Note 2: Every screw jack model with 3 gear ratios as a standard. Custom others gear ratios.

(2) Basic Designs and Configurations

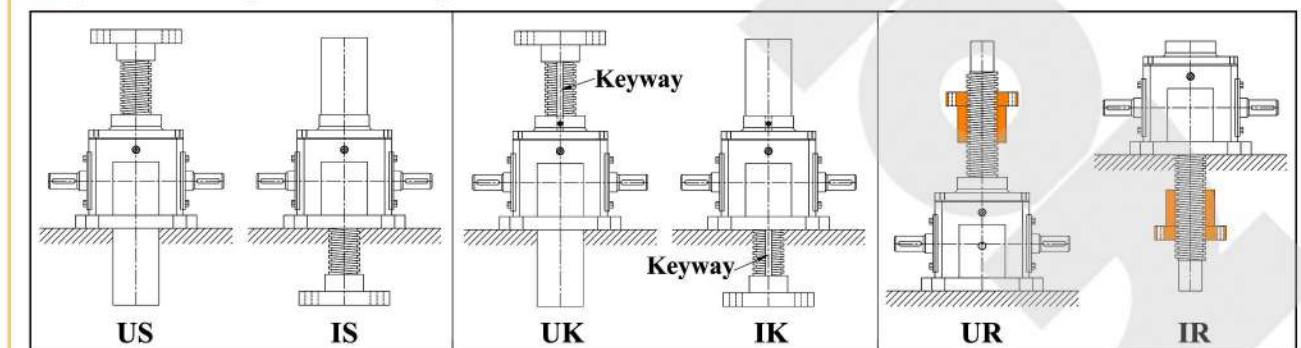

2.1) "US" and "IS" are Translating Screw Jacks, they are the most commonly specified

jack. All that is required for proper function is to restrain the rotation of the lifting screw and apply torque to the input shaft. This is often achieved through the use of guides (guided load) or by attaching a common load across multiple jacks. Most applications use this jack design.



Selection Guide

Sample Part Number

2.2) “UK” and “IK” are **Keyed Screw Jacks**, they are keyed for non-rotation. It is ideal for use in applications where a single jack must extend to meet and move a load to which it is not attached (unguided). Keyed jacks are commonly used in single jack applications where it would not otherwise be possible to restrain the rotation of the jack screw.


- **Note:** Input torque required will increase by approximately 8%.
- **Note:** Custom square protective tube for Anti-rotation Screw Jacks, a square nut is attached to the end of the lifting screw which is then fitted inside the tube, to prevent rotation.

2.3) “UR” and “IR” are **Rotating Screw Jacks**, they are also called travelling nut screw jack.

It is important to restrain the rotation of the traveling nut by applying a significant load, or more commonly by guiding the load or attaching the load across multiple jacks. The Rotating Jacks mount flush and they are ideal for applications where the physical space does not allow the lifting screw to extend below or above the housing.

2.4) Custom double clevis screw jacks, trunnion mount screw jacks and anti-backlash nut screw jacks.


■ (3) Stroke and (5) Screw End Fittings

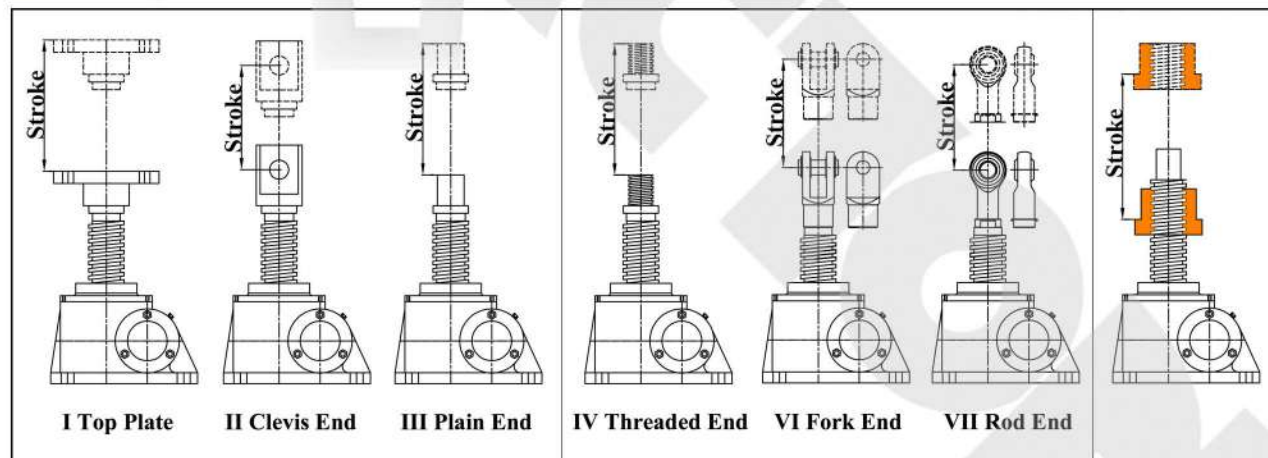

- Stroke is travel expressed in millimeter(mm) or inches and not the actual screw length.
- Standard Lifting Screw End Fittings: Top Plate (I), Clevis End (II), Plain End (III), Threaded End (IV), Forked End (VI) and Rod End (VII). Custom End Fittings are acceptable.

Selection Guide

■ (6) Input Shafts Codes and Motor Flange Adapters Codes (Top View)

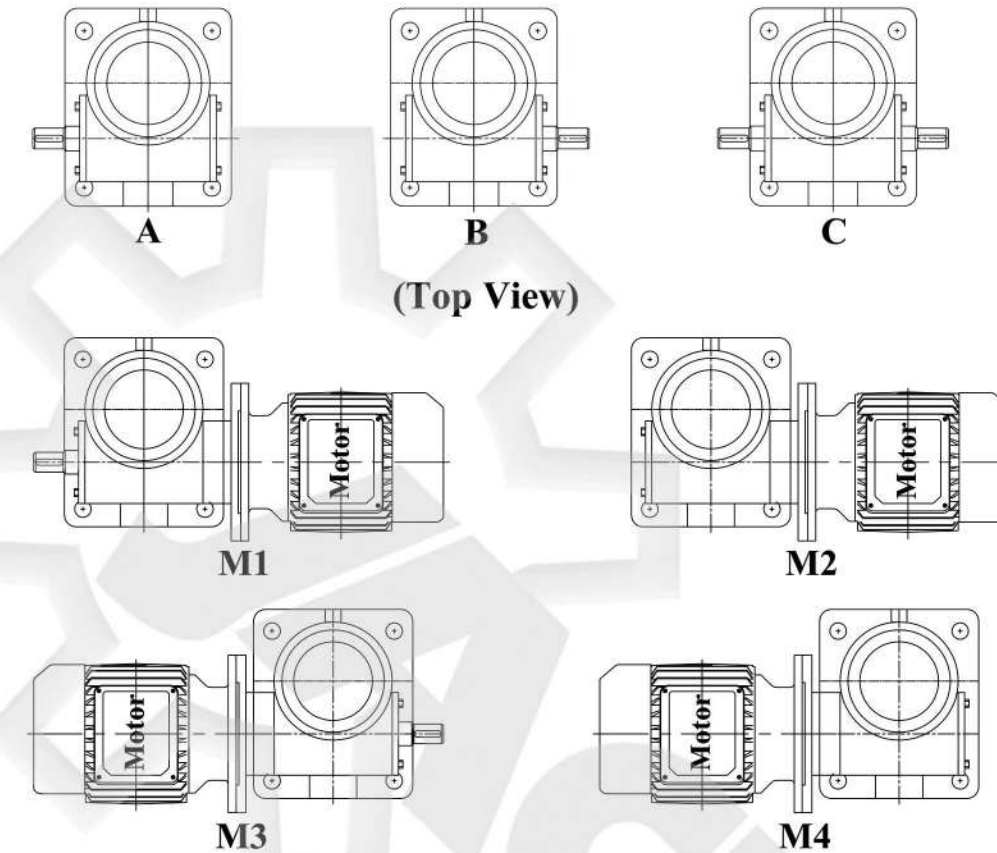

- 6.1) A: Single Input, Left Side Shaft.
- 6.2) B: Single Input, Right Side Shaft.
- 6.3) C: Double Input Shafts
- 6.4) M1: Left Side Shaft, Right Side Motor Flange Adapter (Motor Mounts).
- 6.5) M2: Right Side Motor Flange Adapter (Motor Mounts).
- 6.6) M3: Right Side Shaft, Left Side Motor Flange Adapter (Motor Mounts).
- 6.7) M4: Left Side Motor Flange Adapter (Motor Mounts).

- **Note:** Screw Jacks with IEC Motor Flange Adapter as a standard. Custom NEMA Motor Flange Adapter(Stepper Motor), Servo Motor Flange Adapter and Other Non-standard Motor Flange Adapters.



Selection Guide

Sample Part Number



(7) Accessories

 FC Flex Coupling	 UJ Universal Joint	 TUJ Telescopic Universal Joint	 CS Connecting Shaft	 RE Rod End	 FE Fork End
 PB Pillow Blocks	 FB Flange Blocks	 PP Protective Tube	 BB Bellows Boots	 SN Stop Nut	
 MF Motor Flange	 TMP Trunnion Mount Plate	 SFN Safety Nut	 DPP Double Clevis Protective Tube	 SPP Square Protective Tube	
 EM Electric Motor	 GM Geared Motor	 BGM Bevel Geared Motor	 WG Worm Gearbox	 DCM DC Motor	
 SPM Stepper Motor	 SVM Servo Motor	 HW Hand Wheel	 RED Rotary Encoder	 PS Proximity Switch	

Permissible Buckling Load

If the lifting screw is loaded in tension, the buckling can be avoided, and hence be highly economical. In case of compression load, even occasional, it is necessary to check the buckling structure. Because the thin lifting screws may buckle sideways when subjected to compressive loads.

The permissible buckling load for trapezoidal-screw and ball-screw can be verified using the following bend diagrams. Verify that it does not exceed the permissible buckling load. If it does, increase jack size and recalculate.

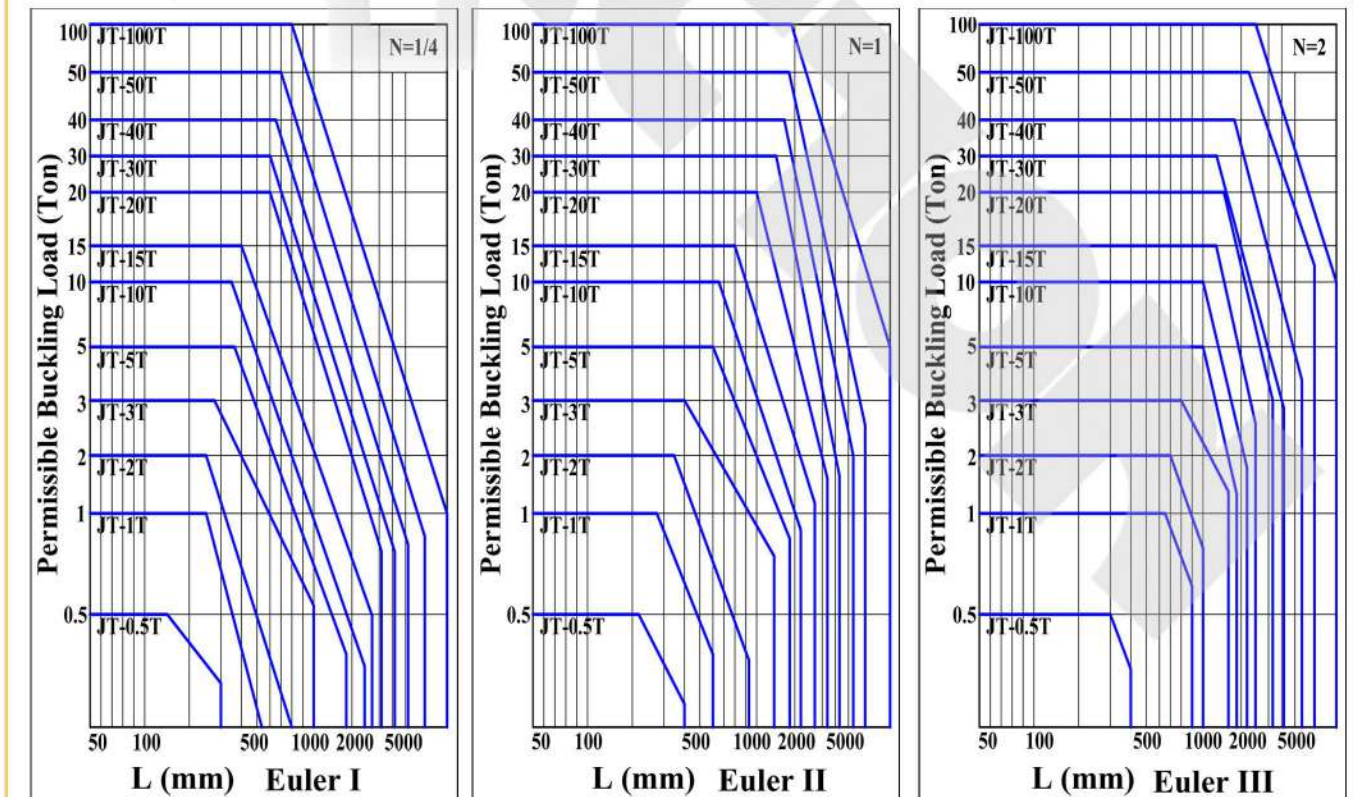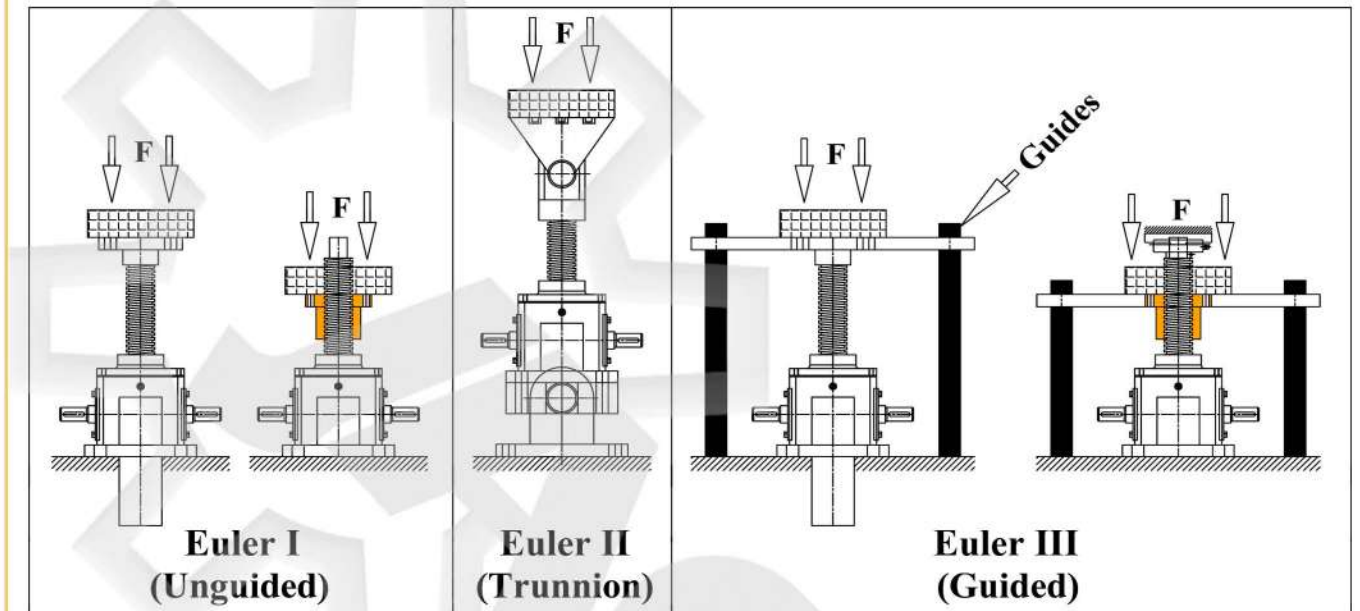






Specifications




Screw Diam. x Pitch (MM)	Worm Gear Ratio	Stroke for One Input Turn (MM)	Input 1800RPM			Input 1500RPM			Input 1200RPM			Input 900RPM			Input 600RPM			Input 300RPM		
			Power (kW)	Load (Ton)	Speed (M/Min)	Power (kW)	Load (Ton)	Speed (M/Min)	Power (kW)	Load (Ton)	Speed (M/Min)	Power (kW)	Load (Ton)	Speed (M/Min)	Power (kW)	Load (Ton)	Speed (M/Min)	Power (kW)	Load (Ton)	Speed (M/Min)
JT-0.5T Tr20x5	H=1/5	1	0.15	0.10	1.80	0.15	0.12	1.50	0.15	0.16	1.20	0.14	0.18	0.90	0.10	0.20	0.06	0.25	0.30	
	M=1/10	0.5	0.08	0.10	0.90	0.14	0.16	0.75	0.10	0.19	0.60	0.08	0.20	0.45	0.06	0.23	0.30	0.04	0.28	0.15
	L=1/20	0.25	0.05	0.12	0.45	0.07	0.18	0.38	0.07	0.21	0.30	0.06	0.25	0.23	0.04	0.25	0.15	0.02	0.30	0.08
JT-1T Tr24x5	H=1/5	1	0.38	0.25	1.80	0.38	0.30	1.50	0.38	0.36	1.20	0.30	0.40	0.90	0.23	0.50	0.60	0.14	0.55	0.30
	M=1/10	0.5	0.15	0.25	0.90	0.19	0.30	0.75	0.23	0.45	0.60	0.19	0.50	0.45	0.15	0.55	0.30	0.08	0.60	0.15
	L=1/20	0.25	0.15	0.30	0.45	0.12	0.36	0.38	0.14	0.50	0.30	0.11	0.55	0.23	0.08	0.60	0.15	0.04	0.60	0.08
JT-2T Tr26x5	H=1/5	1	0.69	0.50	1.80	0.64	0.55	1.50	0.65	0.70	1.20	0.63	0.90	0.90	0.46	1.00	0.60	0.37	1.00	0.30
	M=1/10	0.5	0.37	0.50	0.90	0.37	0.55	0.75	0.37	0.70	0.60	0.37	0.95	0.45	0.37	1.00	0.30	0.19	1.35	0.15
	L=1/20	0.25	0.37	0.60	0.45	0.37	0.70	0.38	0.37	0.90	0.30	0.37	1.20	0.23	0.19	1.35	0.15	0.19	1.35	0.08
JT-3T Tr32x6	H=1/6	1	0.98	0.70	1.80	0.93	0.80	1.50	0.88	0.95	1.20	0.91	1.30	0.90	0.84	1.80	0.60	0.42	1.80	0.30
	M=1/12	0.5	0.66	0.95	0.90	0.64	1.10	0.75	0.61	1.30	0.60	0.57	1.65	0.45	0.46	2.00	0.30	0.37	2.00	0.15
	L=1/24	0.25	0.37	0.95	0.45	0.37	1.10	0.38	0.37	1.30	0.30	0.37	1.65	0.23	0.37	2.00	0.15	0.19	2.00	0.08
JT-5T Tr38x6	H=1/6	1	1.39	0.90	1.80	1.28	1.00	1.50	1.24	1.20	1.20	1.16	1.50	0.90	0.87	1.70	0.60	0.54	2.10	0.30
	M=1/12	0.5	1.10	1.35	0.90	1.01	1.50	0.75	0.98	1.80	0.60	0.87	2.15	0.45	0.58	2.15	0.30	0.37	2.50	0.15
	L=1/24	0.25	0.78	1.80	0.45	0.72	2.00	0.38	0.69	2.40	0.30	0.55	2.55	0.23	0.42	2.90	0.15	0.37	2.85	0.08
JT-10T Tr46x8	H=1/8	1	2.12	1.30	1.80	1.97	1.45	1.50	1.85	1.70	1.20	1.72	2.10	0.90	1.66	3.05	0.60	1.31	4.80	0.30
	M=1/16	0.5	1.12	1.30	0.90	1.04	1.45	0.75	0.98	1.70	0.60	0.95	2.20	0.45	0.87	3.05	0.30	0.69	4.80	0.15
	L=1/32	0.25	0.80	1.75	0.45	0.75	1.95	0.38	0.69	2.25	0.30	0.64	2.80	0.23	0.63	4.10	0.15	0.48	6.40	0.08
JT-15T Tr52x8	H=1/8	1	2.00	1.30	1.80	1.86	1.45	1.50	1.75	1.70	1.20	1.62	2.10	0.90	1.57	3.05	0.60	1.24	4.80	0.30
	M=1/16	0.5	1.06	1.30	0.90	0.98	1.45	0.75	0.93	1.70	0.60	0.89	2.20	0.45	0.83	3.05	0.30	0.65	4.80	0.15
	L=1/32	0.25	0.75	1.75	0.45	0.70	1.95	0.38	0.65	2.25	0.30	0.61	2.80	0.23	0.59	4.10	0.15	0.46	6.40	0.08
JT-20T Tr65x10	H=1/10	1	2.66	1.40	1.80	2.42	1.85	1.50	2.25	1.95	1.20	2.12	2.45	0.90	1.93	3.35	0.60	1.41	4.90	0.30
	M=1/20	0.5	1.42	1.60	0.90	1.47	1.85	0.75	1.37	2.25	0.60	1.28	2.80	0.45	1.18	3.85	0.30	0.86	5.60	0.15
	L=1/40	0.25	1.14	2.40	0.45	1.17	2.80	0.38	1.09	3.35	0.30	1.07	4.40	0.23	0.93	5.75	0.15	0.69	8.40	0.08
JT-30T Tr75x12	H=1/12	1	3.62	1.85	1.80	3.51	2.15	1.50	3.39	2.60	1.20	3.18	3.25	0.90	2.94	4.50	0.60	2.09	6.40	0.30
	M=1/18	0.67	2.65	1.90	1.20	2.68	2.30	1.00	2.57	2.75	0.80	2.45	3.50	0.60	2.19	4.70	0.40	1.56	6.70	0.20
	L=1/36	0.33	1.66	2.20	0.60	1.63	2.60	0.50	1.60	3.20	0.40	1.47	3.90	0.30	1.36	5.40	0.20	1.20	9.60	0.10
JT-40T Tr80x12	H=1/12	1	4.15	1.98	1.80	4.02	2.30	1.50	3.81	2.73	1.20	3.80	3.63	0.90	3.48	4.98	0.60	2.48	7.05	0.30
	M=1/18	0.67	3.20	2.13	1.20	3.20	2.55	1.00	3.04	3.03	0.80	3.03	4.03	0.60	2.74	5.45	0.40	1.94	7.73	0.20
	L=1/36	0.33	2.14	2.63	0.60	2.07	3.05	0.50	1.98	3.65	0.40	1.99	4.88	0.30	1.80	6.60	0.20	1.40	10.30	0.10
JT-50T Tr90x14	H=1/7	2	9.53	2.10	3.60	9.23	2.45	3.00	9.08	2.85	2.40	8.63	4.00	1.80	8.25	5.45	1.20	5.87	7.75	0.60
	M=1/14	1	5.79	2.35	1.80	5.75	2.80	1.50	5.57	3.30	1.20	5.42	4.55	0.90	5.09	6.20	0.60	3.59	8.75	0.30
	L=1/28	0.5	4.10	3.05	0.90	3.92	3.50	0.75	3.91	4.10	0.60	3.68	5.85	0.45	3.50	7.80	0.30	2.46	11.00	0.15
JT-100T Tr 100x16	H=1/8	2	16.35	3.50	3.60	16.13	4.00	3.00	15.90	5.40	2.40	15.15	7.10	1.80	14.93	9.85	1.20	9.75	12.95	0.60
	M=1/16	1	11.78	4.30	1.80	11.63	5.40	1.50	10.58	7.20	1.20	11.03	9.45	0.90	9.68	11.80	0.60	7.13	17.35	0.30
	L=1/32	0.5	8.70	5.50	0.90	9.60	6.80	0.75	7.40	10.00	0.60	7.58	14.30	0.45	7.06	15.75	0.30	5.84	26.05	0.15

Overall Dimensions

JT-0.5T

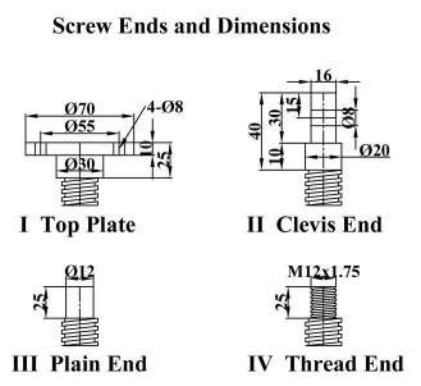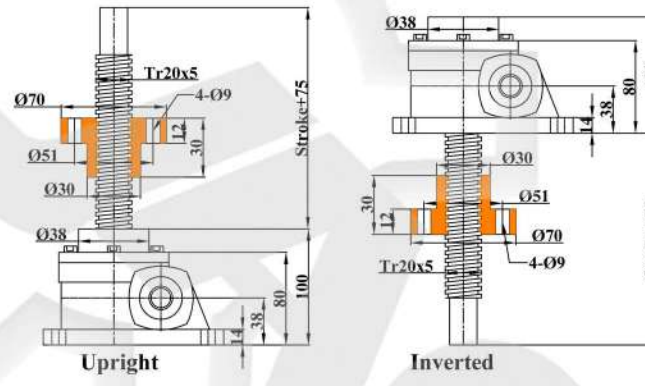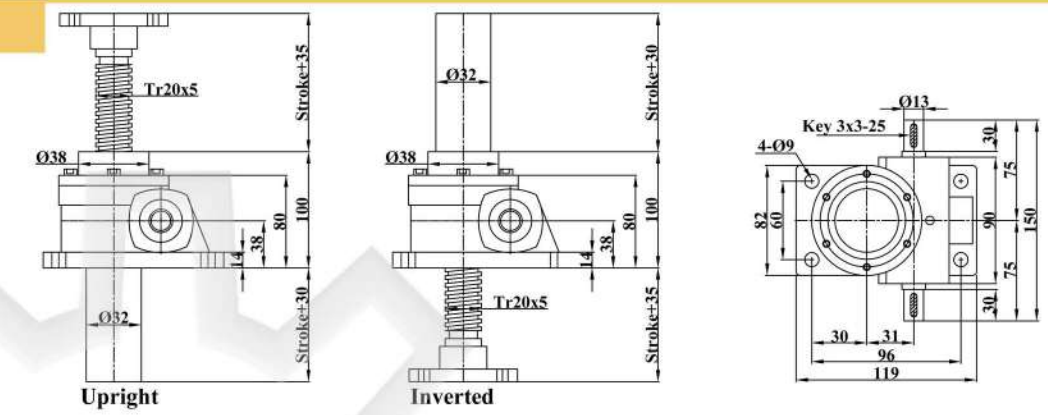

JT-1T

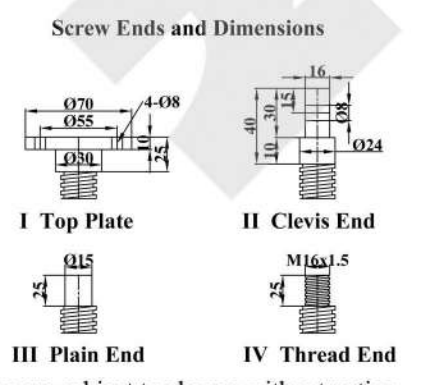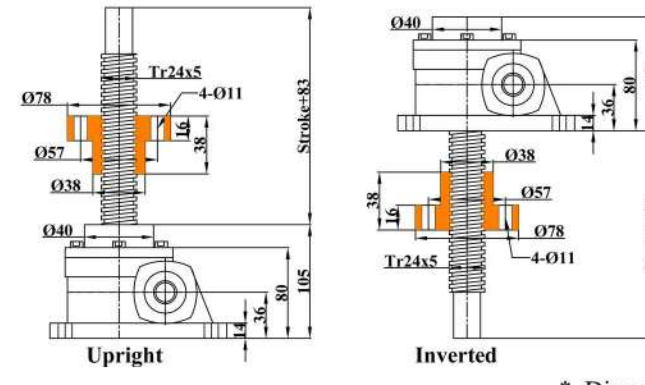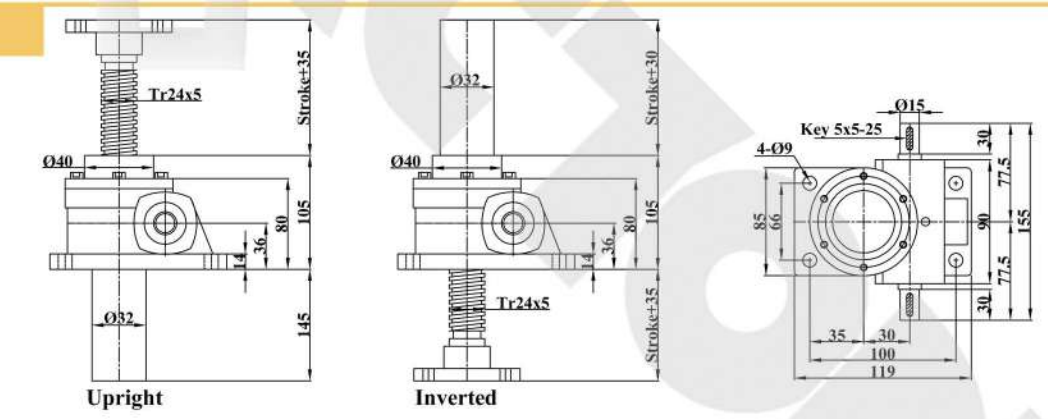


*. Dimensions are subject to change without notice




Overall Dimensions


JT-2T

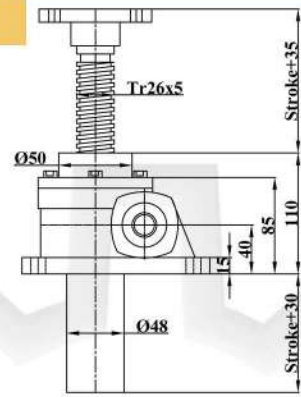


Upright

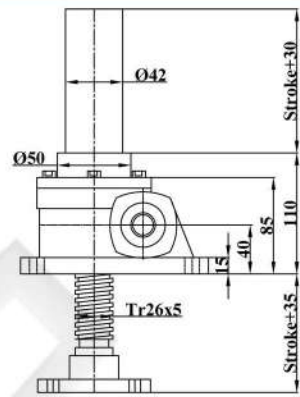


Inverted

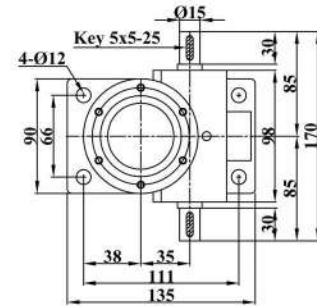


Screw Ends and Dimensions

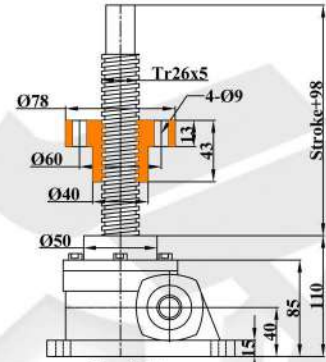


Upright

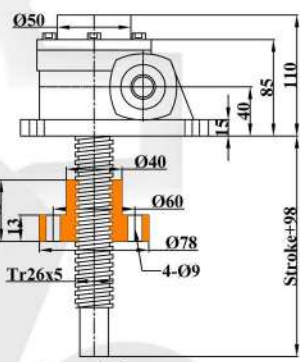


Inverted




I Top Plate



II Clevis End




III Plain End




IV Thread End


JT-3T

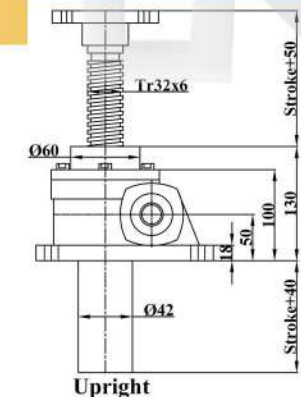


Upright

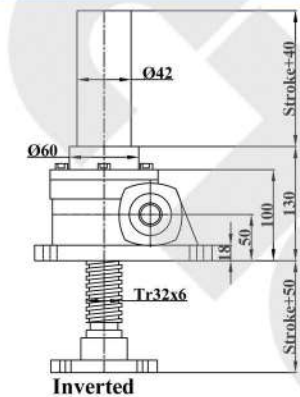


Inverted

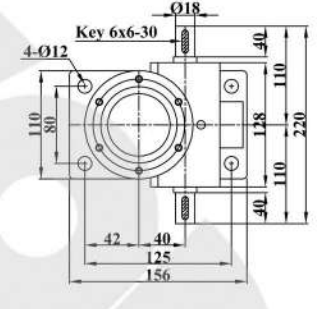


Screw Ends and Dimensions

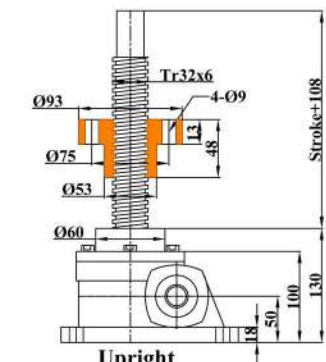


Upright

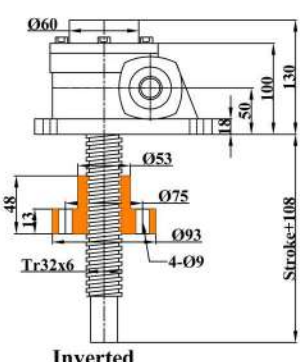


Inverted




I Top Plate



II Clevis End




III Plain End




IV Thread End


JT-5T

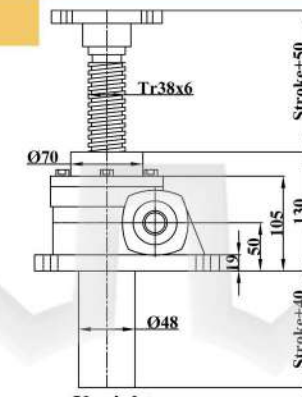


Upright

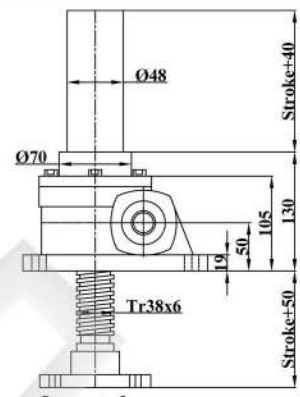


Inverted

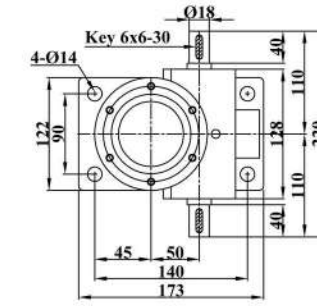


Screw Ends and Dimensions

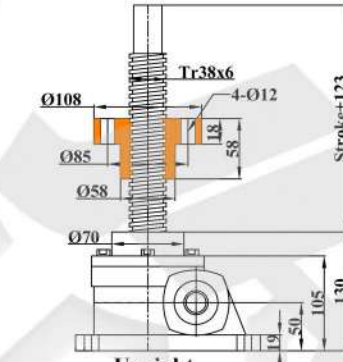


Upright

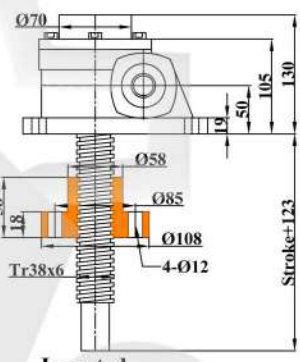

Inverted




I Top Plate



II Clevis End




III Plain End




IV Thread End


JT-10T

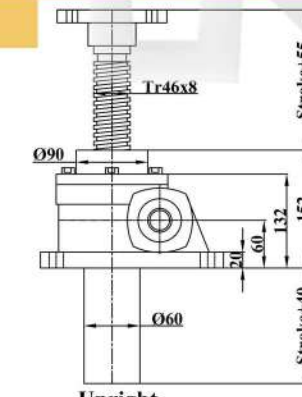


Upright

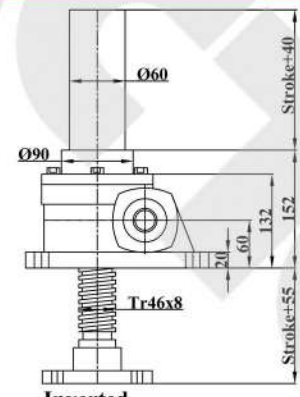


Inverted

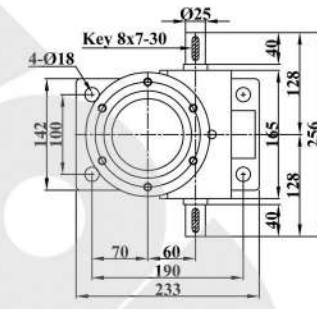


Screw Ends and Dimensions

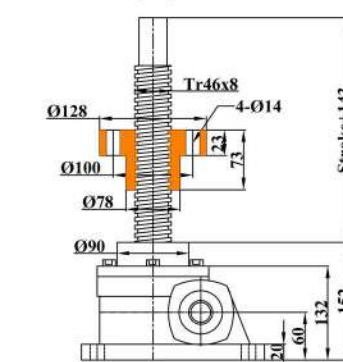

Upright

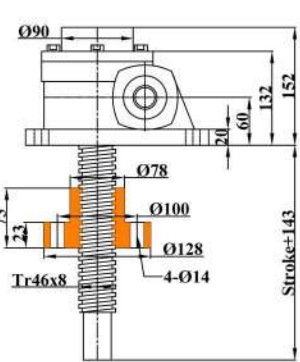


Inverted



I Top Plate



II Clevis End



III Plain End



IV Thread End


*. Dimensions are subject to change without notice

*. Dimensions are subject to change without notice




Overall Dimensions


JT-15T

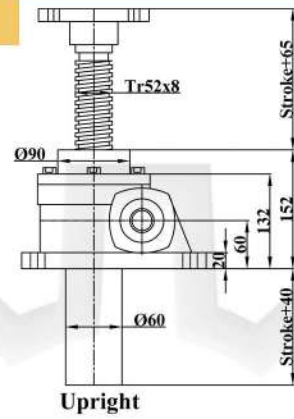


Upright

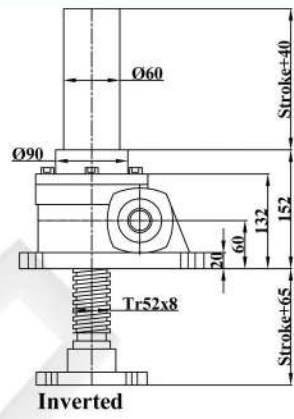


Inverted

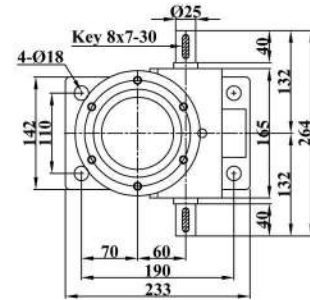


Screw Ends and Dimensions

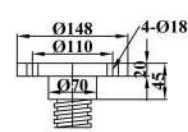


I Top Plate

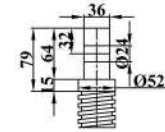


II Clevis End

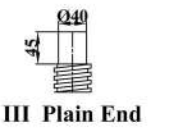


III Plain End

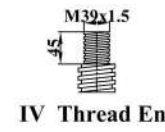

IV Thread End

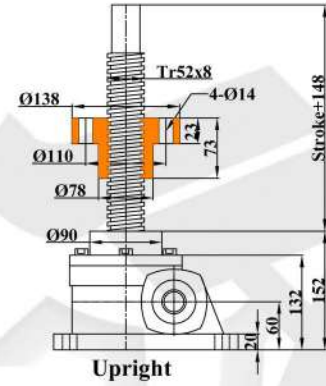


Upright

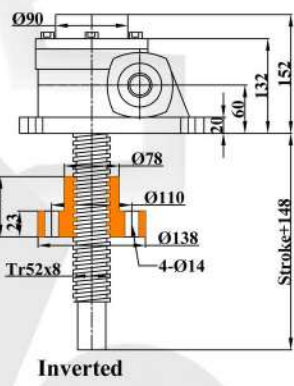


Inverted


JT-20T

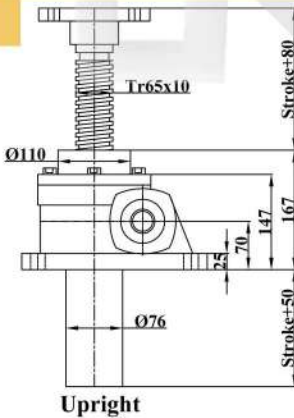


Upright

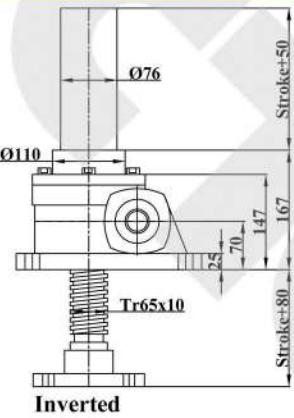


Inverted

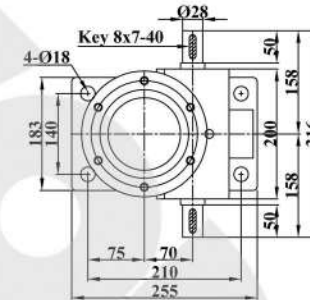


Screw Ends and Dimensions

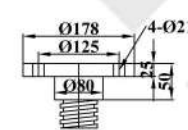


I Top Plate

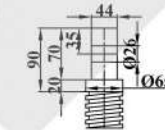


II Clevis End

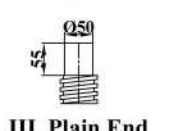


III Plain End

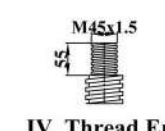

IV Thread End

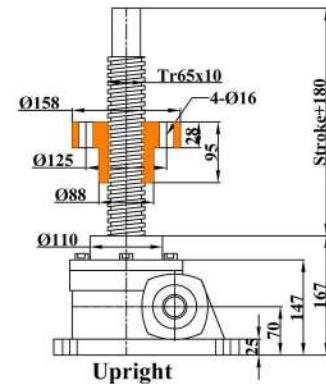


Upright

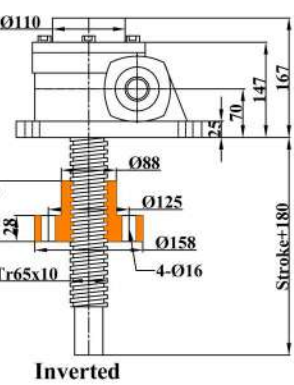


Inverted


JT-30T

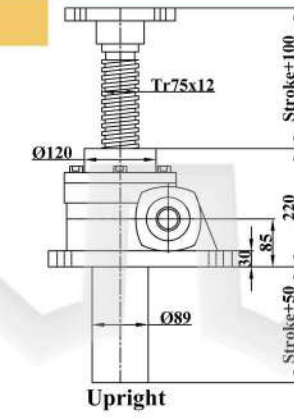


Upright

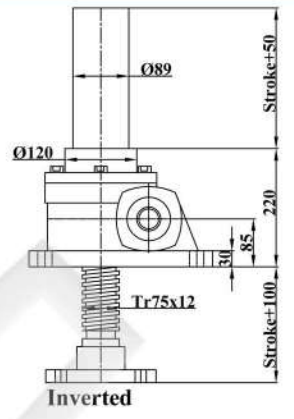


Inverted

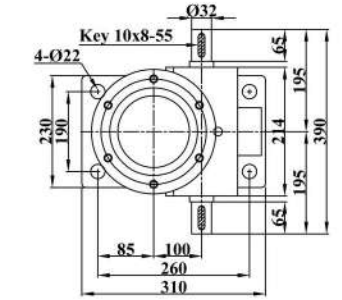


Screw Ends and Dimensions

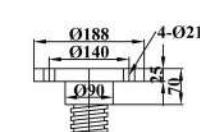


I Top Plate

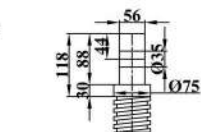


II Clevis End

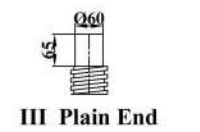


III Plain End

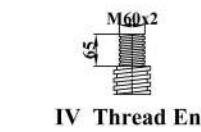

IV Thread End

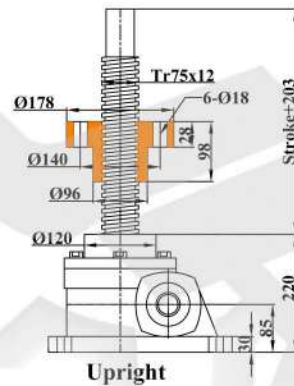


Upright

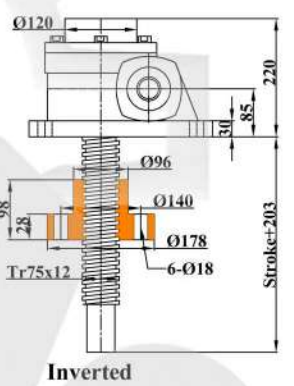


Inverted


JT-40T

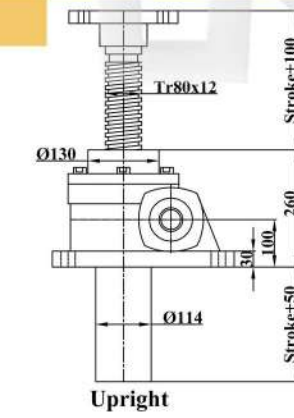


Upright

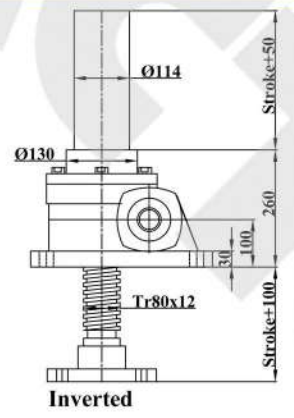


Inverted

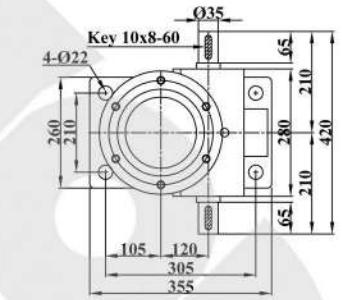

Screw Ends and Dimensions

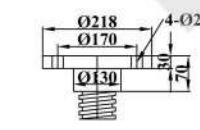


I Top Plate

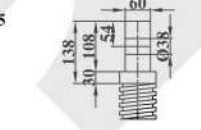


II Clevis End




III Plain End

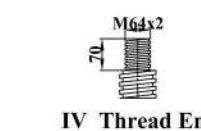

IV Thread End

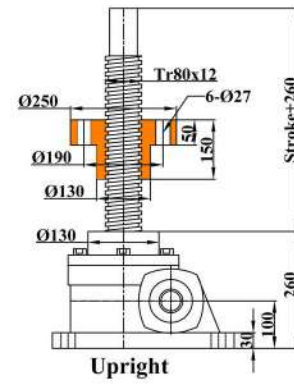

Upright

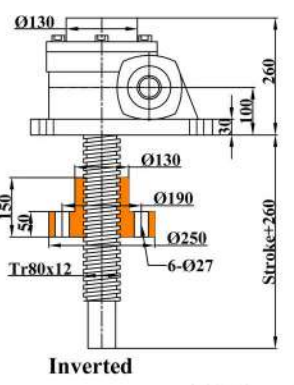

Inverted


*. Dimensions are subject to change without notice

*. Dimensions are subject to change without notice




Overall Dimensions


JT-50T

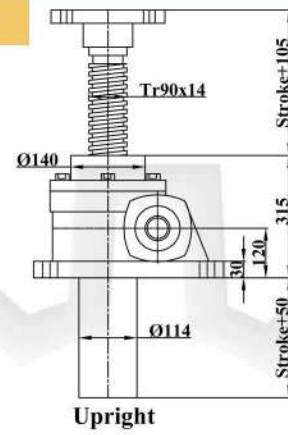


Upright

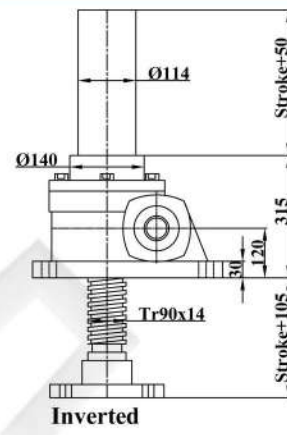


Inverted

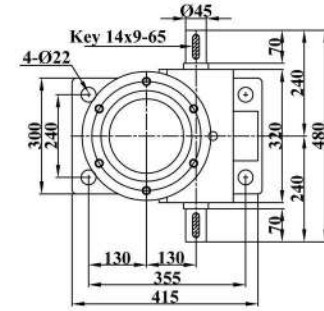

Screw Ends and Dimensions

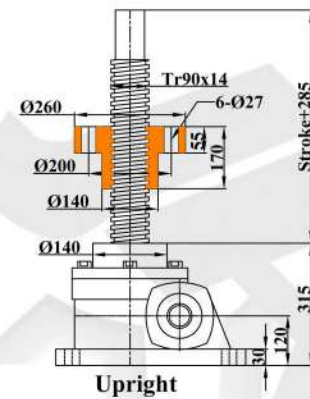

Upright

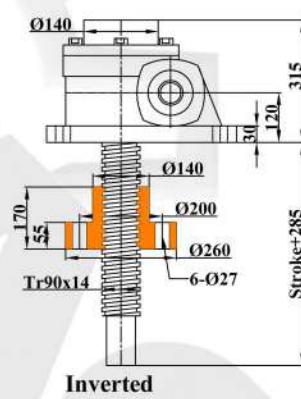

Inverted




I Top Plate



II Clevis End




III Plain End




IV Thread End


JT-100T

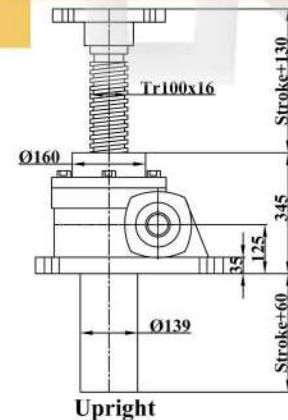


Upright

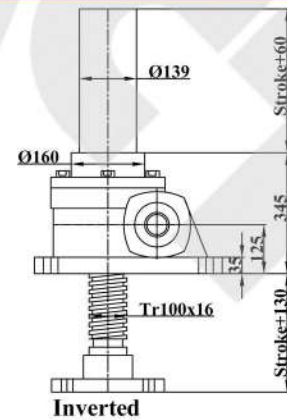


Inverted

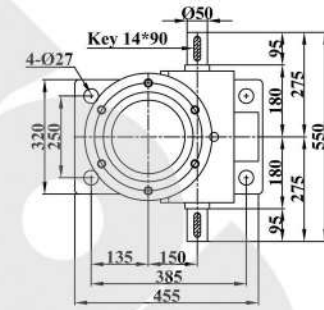

Screw Ends and Dimensions

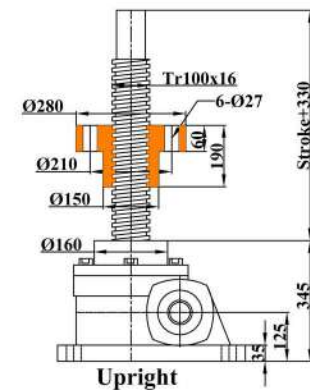

Upright

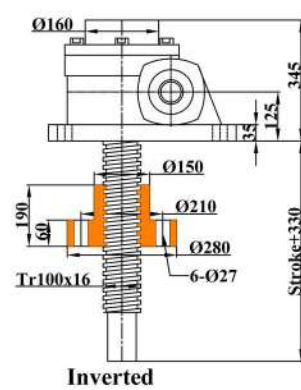

Inverted




I Top Plate



II Clevis End



III Plain End



IV Thread End

*. Dimensions are subject to change without notice